


User's Manual SRP-F310/312/313II

Front Exit Thermal Printer Rev. 1.02

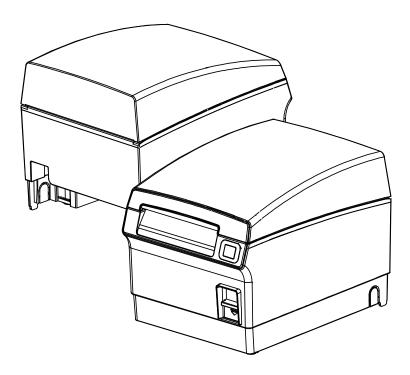

http://www.bixolon.com

Safety Precautions


In using the present appliance, please keep the following safety regulations in order to prevent any hazard or material damage.





CAUTION

Violating following instructions can cause slight wound or damage the appliance.

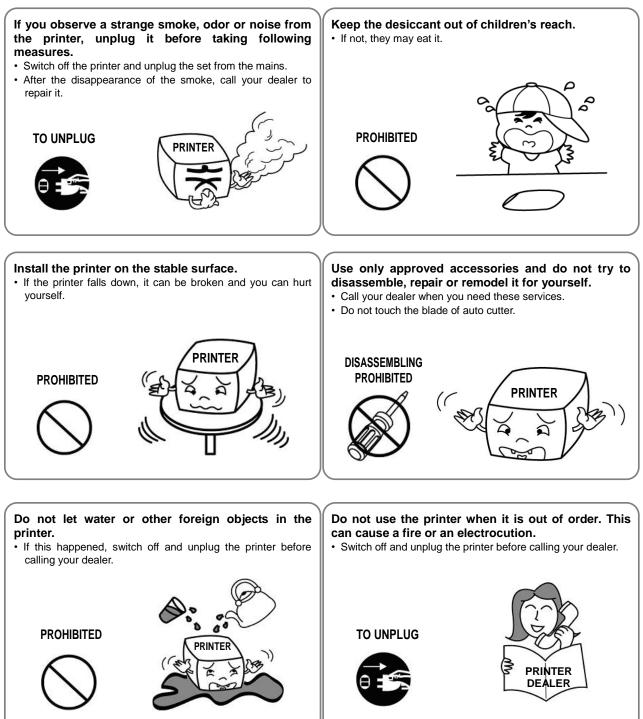

Warning - U.S.A

i) Class B Digital Device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ii) Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

iii) Cation: Exposure to Radio Frequency Radiation.

To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.

Notice - Canada

This Apparatus complies with class "B" limits for radio interference as specified in the Canadian department of communications radio interference regulations.

Get appareil est conforme aux normes class "B" d'interference radio tel que specifier par ministre canadien des communications dans les reglements d'interference radio.

Caution

Some semiconductor devices are easily damaged by static electricity. You should turn the printer "OFF", before you connect or remove the cables on the rear side, in order to guard the printer against the static electricity. If the printer is damaged by the static electricity, you should turn the printer "OFF".


Waste Electrical and Electric Equipment (WEEE)



This marking shown on the product or its literature, indicates that is should not be disposed with other household wastes at the end of its working life, To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or

their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Rating Label Symbol Information

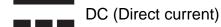

Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Label Material

- * Control Label: PC
- * Other Labels: PET

Introduction

SRP-F310/312/313II series printers have been designed to be connected to various types of electronic devices such as ECR (Electronic Cash Register), POS (Point Of Sales), and computer peripheral devices.

- 1. High speed printing: 82.74/93.33 lines per second.
- 2. Low noise thermal printing.
- 3. Support of USB & Ethernet (built-in type), serial, parallel, POWERED USB, Wireless LAN, and Bluetooth interfaces
- 4. The data buffer allows the unit to receive print data even during printing.
- 5. Peripheral units drive circuit enables control of external devices such as cash drawer.
- 6. Bar code printing is possible by using a bar code command.
- 7. Different print densities can be selected by DIP switches.
- * For network information, refer to the 'Network user manual'

Please be sure to read the instruction in this manual carefully before using your new SRP-F310/312/313II

***** Use only authorized supplies that can be trusted!

- We are not responsible for quality and service for damage caused by the use of unauthorized products(or recycled ones).
- The following Bluetooth mark and QD ID B021701 is only applicable to models with the Bluetooth SIG qualification.



We at BIXOLON maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.


■ Table of Contents

1-1 Unpacking.	1. Setting Up the Printer	8
1-2 Interface 9 1-2-1 USB Interface 9 1-2-2 Ethernet Interface 9 1-2-3 Serial Interface (RS-232C) 10 1-2-3-1 Single Interface 10 1-2-3-2 Dual Interface 10 1-2-4 Parallel Interface (IEEE1284) 12 1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-5 Installing or Replacing the Paper 19 1-6 Using 83mm Paper 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2	1-1 Unpacking	8
1-2-2 Ethernet Interface 9 1-2-3 Serial Interface (RS-232C) 10 1-2-3-1 Single Interface 10 1-2-3-2 Dual Interface 10 1-2-4 Parallel Interface 12 1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 24 <th></th> <th></th>		
1-2-2 Ethernet Interface 9 1-2-3 Serial Interface (RS-232C) 10 1-2-3-1 Single Interface 10 1-2-3-2 Dual Interface 10 1-2-4 Parallel Interface 12 1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 24 <th>1-2-1 USB Interface</th> <th>9</th>	1-2-1 USB Interface	9
1-2-3 Serial Interface (RS-232C) 10 1-2-3-1 Single Interface 10 1-2-3-2 Dual Interface 10 1-2-4 Parallel Interface (IEEE1284) 12 1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24		
1-2-3-1 Single Interface 10 1-2-3-2 Dual Interface 10 1-2-4 Parallel Interface (IEEE1284) 12 1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24		
1-2-3-2 Dual Interface101-2-4 Parallel Interface (IEEE1284)121-2-5 Powered USB Interface131-2-6 Bluetooth / WLAN Interface131-2-6-1 Bluetooth Interface131-2-6-2 Wireless LAN Interface141-3 Connecting the Drawer141-4 Setting the Dip Switches151-4-1 Serial Interface151-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface151-4-3 Bluetooth Interface151-4-3 Bluetooth Interface151-5 Installing or Replacing the Paper171-6 Using 83mm Paper191-7 Recommended Papers191-8 Using the Computer201-9 Connecting the Power Supply212. Self Test223. Hexadecimal Dumping234. Specification245. Appendix25		
1-2-4 Parallel Interface (IEEE1284) 12 1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-9 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
1-2-5 Powered USB Interface 13 1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-5 Installing or Replacing the Paper 19 1-7 Recommended Papers 19 1-7 Recommended Papers 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
1-2-6 Bluetooth / WLAN Interface 13 1-2-6-1 Bluetooth Interface 13 1-2-6-2 Wireless LAN Interface 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-9 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24		
1-2-6-1 Bluetooth Interface131-2-6-2 Wireless LAN Interface141-3 Connecting the Drawer141-4 Setting the Dip Switches151-4-1 Serial Interface151-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface151-4-3 Bluetooth Interface151-4-3 Bluetooth Interface151-5 Installing or Replacing the Paper171-6 Using 83mm Paper191-7 Recommended Papers191-8 Using the Printer201-9 Connecting the Computer201-10 Connecting the Power Supply212. Self Test223. Hexadecimal Dumping234. Specification245. Appendix25		
1-2-6-2 Wireless LAN Interface. 14 1-3 Connecting the Drawer 14 1-4 Setting the Dip Switches 15 1-4-1 Serial Interface 15 1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface 15 1-4-3 Bluetooth Interface 15 1-4-3 Bluetooth Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
1-4 Setting the Dip Switches151-4-1 Serial Interface151-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface151-4-3 Bluetooth Interface151-5 Installing or Replacing the Paper171-6 Using 83mm Paper191-7 Recommended Papers191-8 Using the Printer201-9 Connecting the Computer201-10 Connecting the Power Supply212. Self Test223. Hexadecimal Dumping234. Specification245. Appendix25		
1-4 Setting the Dip Switches151-4-1 Serial Interface151-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface151-4-3 Bluetooth Interface151-5 Installing or Replacing the Paper171-6 Using 83mm Paper191-7 Recommended Papers191-8 Using the Printer201-9 Connecting the Computer201-10 Connecting the Power Supply212. Self Test223. Hexadecimal Dumping234. Specification245. Appendix25	1-3 Connecting the Drawer	14
1-4-1 Serial Interface151-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface151-4-3 Bluetooth Interface151-5 Installing or Replacing the Paper171-6 Using 83mm Paper191-7 Recommended Papers191-8 Using the Printer201-9 Connecting the Computer201-10 Connecting the Power Supply212. Self Test223. Hexadecimal Dumping234. Specification245. Appendix25	6	
1-4-3 Bluetooth Interface 15 1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
1-5 Installing or Replacing the Paper 17 1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25	1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface	15
1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25	1-4-3 Bluetooth Interface	15
1-6 Using 83mm Paper 19 1-7 Recommended Papers 19 1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25	1-5 Installing or Replacing the Paper	17
1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
1-8 Using the Printer 20 1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25	1-7 Recommended Papers	19
1-9 Connecting the Computer 20 1-10 Connecting the Power Supply 21 2. Self Test 22 3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
1-10 Connecting the Power Supply		
3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
3. Hexadecimal Dumping 23 4. Specification 24 5. Appendix 25		
4. Specification	2. Self Test	22
4. Specification		
5. Appendix	3. Hexadecimal Dumping	23
5. Appendix		
	4. Specification	24
	5. Appendix	25

1. Setting Up the Printer

1-1 Unpacking

Your printer box should include these items. If any items are damaged or missing, please contact your dealer for assistance.

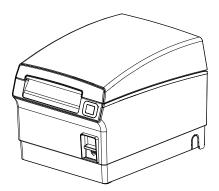

SRP-F310/312/313II



CD



Roll Paper

Manual



Power Cord


1-2 Interface

You can connect up the three cables to the printer.

They all connect to the connector panel on the back of the printer, which is shown below:

※ CAUTIONS

Before connecting any of the cables, make sure that both the printer and the host are turned off.

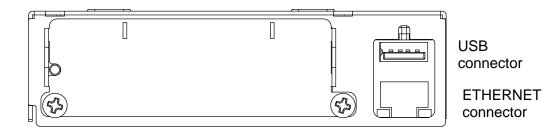

1-2-1 USB Interface

Pin No.	Signal Name	Assignment (Color)	Function	
Shell	Shield	Drain Wire	Frame Ground	
1	VBUS	Red	Host Power	
2	D-	White	Data Line (D-)	
3	D+	Green	Data Line (D+)	
4	GND	Black	Signal Ground	

1-2-2 Ethernet Interface


Pin No.	Signal Name	Color	Function
1	TD+	WHITE ORANGE	Transmit +
2	TD-	ORANGE	Transmit -
3	TCT	WHITE GREEN	Receive +
4	NC	BLUE	-
5	NC	WHITE BLUE	-
6	RCT	GREEN	Receive -
7	RD+	WHITE BROWN	-
8	RD-	BROWN	-

* IP and MAC information can be obtained from the self-test. Refer to the Ethernet User's Manual that is available from the BIXOLON website for more detailed information.


* For using this interface in the Bluetooth or WLAN applied product, Printer wiring requires to use double shielded (Cat 7) Ethernet cable.

1-2-3 Serial Interface (RS-232C)

1-2-3-1 Single Interface

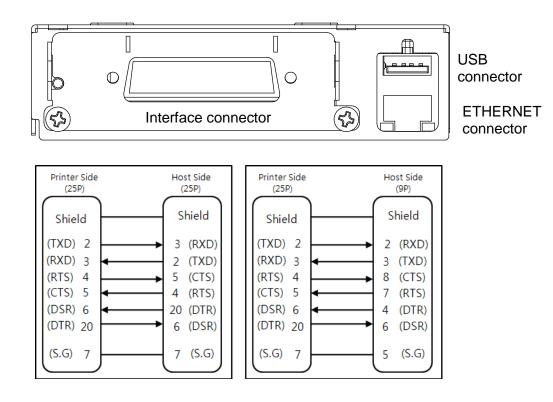

1-2-3-2 Dual Interface

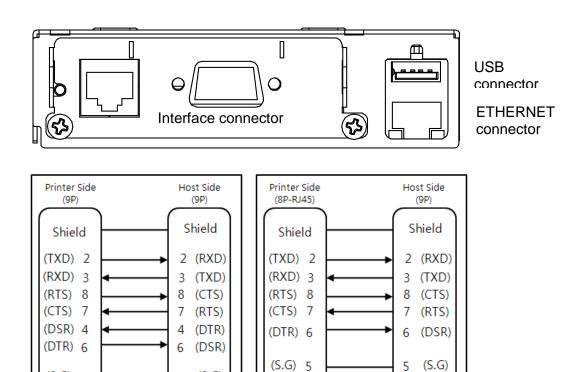


(S.G) 5

5

(S.G)


Pin No.	Signal Name	Direction	Function
Main	Frame GND	-	Frame Ground
2	TXD	Output	Data Transmission
3	RXD	Input	Data Reception
6	DSR	Input	 This signal shows whether the host computer can receive data (hardware flow control). 1) MARK (Logic 1): The host computer can receive data. 2) SPACE (Logic 2): The host computer cannot receive data. 3) After checking the signal in the printer, it transmits data to the host. 4) When XON / XOFF flow control is selected, the printer does not confirm this signal.
7	Signal GND	-	Signal Ground
20	DTR	Output	 This signal shows whether the printer works or not (hardware flow control). 1) MARK (Logic 1): Printer is working. 2) SPACE (Logic 2): Printer is not working. 3) After checking the signal in the printer, it transmits data to the host. 4) When XON/XOFF flow control is selected, the printer does not confirm this signal.
Shield	Frame GND	-	Frame Ground

1-2-4 Parallel Interface (IEEE1284)

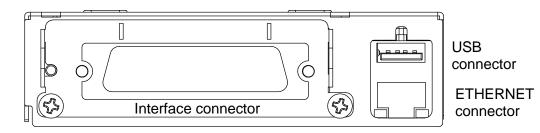

Pin No.	Source	Compatibility Mode	Nibble Mode	Byte Mode
1	Host	nStrobe	HostClk	HostClk
2	Host / Printer	Data 0 (LSB)	-	Data 0 (LSB)
3	Host / Printer	Data 1	-	Data 1
4	Host / Printer	Data 2	-	Data 2
5	Host / Printer	Data 3	-	Data 3
6	Host / Printer	Data 4	-	Data 4
7	Host / Printer	Data 5	-	Data 5
8	Host / Printer	Data 6	-	Data 6
9	Host / Printer	Data 7 (MSB)	-	Data 7 (MSB)
10	Printer	nAck	PtrClk	PtrClk
11	Printer	Busy	PtrBusy / Data3,7	PtrBusy
12	Printer	Perror	AckDataReq / Data2,6	AckDataReq
13	Printer	Select	Xflag / Data1,5	Xflag
14	Host	nAutoFd	HostBusy	HostBusy
15	-	NC	NC	NC
16	-	GND	GND	GND
17	-	FG	FG	FG
18	Printer	Logic-H	Logic-H	Logic-H
19~30	-	GND	GND	GND
31	Host	nInit	nInit	nInit
32	Printer	nFault	nDataAvail / Data0,4	nDataAvail
33	-	GND	ND	ND
34	Printer	DK_Status	ND	ND
35	Printer	+5V	ND	ND
36	Host	nSelectIn	1284-Active	1284-Active

1-2-5 Powered USB Interface

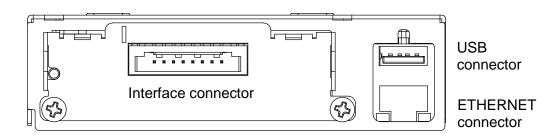


Pin No.	Signal Name	Function
Shield	Shield	Frame Ground
1	PGND	Main Power Ground
2	VPP24V	Main Power
3	GND	Signal Ground
4	D+	Data Line (D+)
5	D-	Data Line (D-)
6	VBUS	Hose Power
7	VPP24V	Main Power
8	PGND	Main Power Ground

* For cable and connector information, refer to the web-site (www.powered.org)

* In case of using Powered USB interface, the other USB interface provided by default is not useful. (In this case, USB communication is only available through the Powered USB)

1-2-6 Bluetooth / WLAN Interface

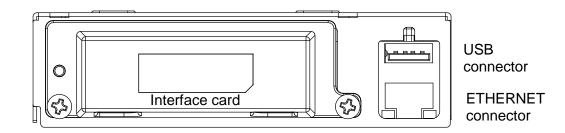

1-2-6-1 Bluetooth Interface

1) Bluetooth Communication Specifications

Item	Specifications
Frequency	2.402~2.480 GHz
Version	2.1 + EDR
Module Type	Class 1

2) Bluetooth Connection

Printer can be connected to terminal devices with Bluetooth communication capability (PDA, PC, smartphone, tablet PC, etc.)

* Refer to the Bluetooth Connection Manual for more detailed instructions about how to establish the connection.

1-2-6-2 Wireless LAN Interface

_/	
Item	Specifications
Frequency	2.412~2.484 GHz
Channel	Channel 1~13
Protocol	802.11b, 802.11g, 802.11n

2) Connecting Wireless LAN

Printer can be connected to terminal devices with wireless LAN communication capability (PDA, PC, smartphone, tablet PC, etc.).

* Refer to the Wireless LAN Connection Manual for more detailed instructions about how to establish the connection.

1-3 Connecting the Drawer



Connect the cash drawer connecting cable to the cash drawer connection in the rear of the printer.

WARNING

Use a drawer that matches the printer specification. Using an improper drawer may damage the drawer as well as the printer.

*** CAUTIONS**

Do not connect a telephone line to the drawer kick-out connector. Otherwise, the telephone line and the computer may be damaged.

Pin No.	Signal name	Direction
1	Frame ground	-
2	Drawer kick- out drive signal 1	Output
3	Drawer open/close signal	Input
4	+24V	-
5	Drawer kick- out drive signal 2	Output
6	Signal ground	-

1-4 Setting the Dip Switches

1-4-1 Serial Interface

• DIP Switch 1

SW	Function	ON	OFF	Default
		-		
1-1	Auto-Cutter Selection	Disable	Enable	OFF
1-2	Handshaking	XON / OFF	DTR / DSR	OFF
1-3	Word length	7 bits	8 bits	OFF
1-4	Parity check	Yes	No	OFF
1-5	Parity selection	EVEN	ODD	OFF
1-6				OFF
1-7	Baud rate selection	Refer to the Fo	blowing Table 1	ON
1-8				OFF

1-4-2 Parallel / USB / Ethernet / Wireless LAN / Powered USB Interface

• DIP Switch 1

	•			
SW	Function	ON	OFF	Default
1-1	Auto-Cutter Selection	Disable	Enable	OFF
1-2				
~	Reserved	-	-	OFF
1-8				

1-4-3 Bluetooth Interface

• DIP Switch 1

SW	Function	ON	OFF	Default
1-1	Auto-Cutter Selection	Disable	Enable	OFF
1-2	Reserved	-	-	OFF
1-3	SSP Mode	Enabled	Disabled	OFF
1-4	Reserved	-	-	OFF
1-5	Reserved	-	-	OFF
1-6	Reserved	-	-	OFF
1-7	Reserved	-	-	ON
1-8	Reserved	-	-	OFF

Transmission speed	SW1 – 6	SW1 – 7	SW1 – 8	Default
2400 baud	ON	OFF	OFF	
4800 baud	ON	OFF	ON	
9600 baud	OFF	ON	OFF	
19200 baud	OFF	OFF	OFF	9600
38400 baud	OFF	ON	ON	
57600 baud	OFF	OFF	ON	
115200 baud	ON	ON	ON	

Table 1 - Baud Rate Selection

***** Auto Cutter Enable / Disable selection

Dip Switch Set 1				
SW1 - 1	ON	Auto Cutter Disable		
5001-1	OFF	Auto Cutter Enable		
Application	Ignores Auto Cutter error for continuous printing			

※ Attention

The printer must be turned off when changing the DIP switch settings. Failure to turn it off may cause a short circuit and damage the printer.

To change the settings:

- 1) Turn off the printer.
- 2) Open the DIP switch cover located at the back of the printer.
- 3) Set the DIP switch number.
- 4) Close the DIP switch cover after the settings have been completed.
- 5) Position the printer in front and turn it on.

% Note

Please make sure that the printer is turned off when changing the DIP switch settings. The change is not accepted when the power is on.

1-5 Installing or Replacing the Paper


※ CAUTIONS

Be sure to use paper rolls that meet the specifications. Do not use paper rolls that have the paper glued to the core because the printer may not detect the paper end correctly.

Do not use paper wider than 80 mm or plastic paper tube when using a printer that specifies 80 mm paper.

1-5-1 Make sure that the printer is not receiving data; otherwise, data may be lost.

1-5-2 Open the paper roll cover by pressing the Push button.

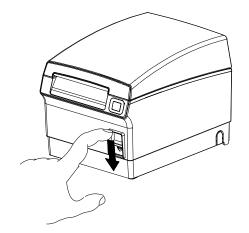


※ CAUTIONS


Do not open the print cover while the printer is operating. This may damage the printer.

1-5-3 Remove any existing used paper roll core when replacing the paper roll


1-5-4 Insert the paper roll as shown.

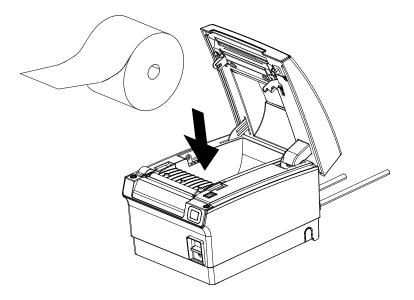

1-5-5 Check the orientation of the roll paper when inserting it into the printer.

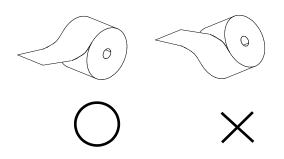


1-5-6 Pull out a small amount of paper, as shown. Then close the cover.

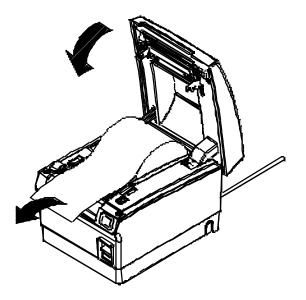

*** CAUTIONS**

When closing the cover, press the center of printer cover firmly to prevent paper miss-loading.

1-5-7 Tear off the paper as shown.

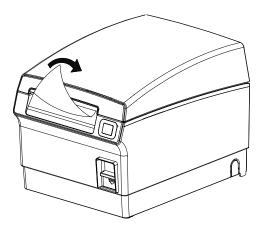


1-6 Using 83mm Paper

Use of the partition depends on the width of the paper.

1-6-1 Remove the partition as shown in the following picture when using 83 mm paper.

*** NOTE**

Partition is installed at the factory for 80 mm paper.

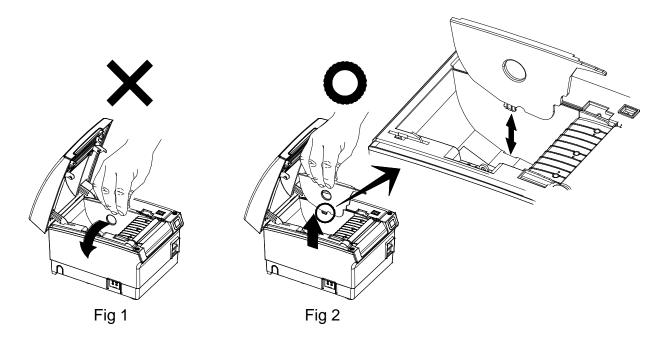

*** CAUTIONS**

Do not rotate the partition while removing it from the printer as shown in Fig 1 because the holder may be damaged. Lift up the partition as shown in Fig 2 to remove it safely.

1-6-2 The rest of the installation process after this step is the same as the procedure described in 1-5.

1-7 Recommended Papers

- TF50KS-E (Paper Thickness: 65µm): Nippon Paper Industries Co., Ltd.
- PD 160R (Paper Thickness: 75µm): New Oji Paper Mfg. Co., Ltd.
- P350 (Paper Thickness: 62µm): Kansaki Specialty Paper, Inc. (USA)

*** CAUTIONS**

Use of papers other than those recommended above may damage TPH or degrade the printing quality and our company is not responsible for the damage caused by non-recommended papers. If you have to use other products, we recommend that you use papers with a similar level of quality to the recommended ones.

1-8 Using the Printer

Control Panel

POWFR	ERROR	PAPER

○ POWER

The POWER light is on whenever the printer is on.

\bigcirc ERROR

This indicates an error.

This light indicates the near end of the paper roll. Install a new paper roll and the printer will continue printing. When the light blinks, it indicates the self-test printing standby state or macro execution Standby state when the macro execution command is used.

○ FEED


Press the FEED button once to advance paper one line. You can also hold down the FEED button to feed paper continuously.

1-9 Connecting the Computer

You need an appropriate interface cable.

1-9-1 Plug the cable connector securely into the printer's interface connector.

1-9-2 Tighten the screws on both sides of the cable connector.

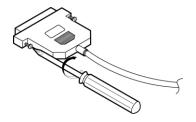

1-9-3 Attach the other end of the cable to the computer.


1-10 Connecting the Power Supply

*** CAUTIONS**

When connecting or disconnecting the power supply from the printer, make sure that the power supply is not plugged into an electrical outlet. Otherwise you may damage the power supply or the printer.

If the power supply's rated voltage and your outlet's voltage do not match, contact your dealer for assistance. Do not plug in the power cord. Otherwise, you may damage the power supply or the printer.

- 1-10-1 Make sure that the printer's power switch is turned off, and the power supply's power cord is unplugged from the electrical outlet.
- 1-10-2 Check the label on the power supply to make sure that the voltage required by the power supply matches that of your electrical outlet.
- 1-10-3 Plug in the power supply's cable as shown below. Notice that the flat side of the plug faces down.

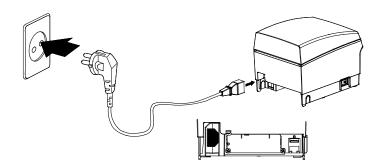

*** NOTE**

To remove the DC cable connector, make sure that the power supply's power cord is unplugged; then grasp the connector at the arrow and pull it straight out.

2. Self Test

The self-test checks whether the printer has any problems.

If the printer does not function properly, contact your dealer. The self-test checks the following:

- 2-1 Make sure paper roll has been installed properly.
- 2-2 Turn on the power while holding down the FEED button with beep. The self-test begins.
- 2-3 The self-test prints the current printer status, which provides the control ROM version and the DIP switch setting.
- 2-4 After printing the current printer status, self-test printing will print the following, and pause (The PAPER LED light blinks).

SELF-TEST PRINTING. PLEASE PRESS THE FEED BUTTON.

- 2-5 Press the FEED button to continue printing. The printer prints a pattern using the built-in character set.
- 2-6 The self-test automatically ends and cuts the paper after printing the following.

*** COMPLETED ***

2-7 The printer is ready to receive data as soon as it completes the self-test.

3. Hexadecimal Dumping

This feature allows experienced users to see exactly what data is coming to the printer. This can be useful in finding software problems. When you turn on the hexadecimal dump function, the printer prints all commands and data in hexadecimal format along with a guide section to help you find specific commands.

To use the hexadecimal dump function, follow these steps.

3-1 After you make sure that the printer is off, open the cover.

3-2 Turn on the printer, while holding down the FEED button with beep.

3-3 Close the cover, then the printer enters the hexadecimal dump mode.

3-4 Run any software program that sends data to the printer. The printer will print all the codes it receives in a two-column format. The first column contains the hexadecimal codes and the second column gives the ASCII characters that corresponds to the codes.

 1B
 21
 00
 1B
 26
 02
 40
 40
 40
 . ! . . & . @ @ @ @
 @ @ @ @

 02
 0D
 1B
 44
 0A
 14
 1E
 28
 28
 28
 . . . D (((

 00
 01
 0A
 41
 0D
 42
 0A
 43
 43
 43
 . . . A . B . C C C

A period (.) is printed for each code that has no ASCII equivalent. During the hex dump, all commands except DLE EOT and DLE ENQ are disabled.

3-5 When the printing finishes, turn off the printer.

3-6 Turn on the printer and then the hexadecimal mode is off.

4. Specification

Printi	ing method	Thermal line printing		
		SRP-F310II: 180dpi(7dots/mm)		
Do	t density	SRP-F312II: 203dpi(8dots/mm)		
Dectablicky		SRP-F313II: 203dpi(8dots/mm)		
		SRP-F310II: 72mm		
Prin	ting width	SRP-F312II: 72mm		
J J J J J J J J J J J J J J J J J J J		SRP-F313II: 80mm		
Pa	per width	79.5±0.5mm/82.5±0.5mm		
		SRP-F310II: 42(Font A), 56(Font B)		
Characters	per line (default)	SRP-F312II: 48(Font A), 64(Font B)		
, /		SRP-F313II :53(Font A), 71(Font B)		
		SRP-F310II: 82.74 lines/sec, Max. 350mm/sec		
Printing speed		SRP-F312II: 93.33 lines/sec, Max. 350mm/sec		
		SRP-F313II: 93.33 lines/sec, Max. 350mm/sec		
Receive Buffer Size		4K Bytes		
* NOTE: Printing speed may be slower		er, depending on the data transmission		
spee	ed andthe combination of	of control commands.		
	SMPS Input voltage	100~240VAC		
Supply voltage	Frequency	50/60Hz		
	SMPS Output voltage	24VDC		
	Tomporatura	0~40 °C (Operating)		
Environmental	Temperature	-20~60 °C (Storage)		
Conditions		10~80 % RH (Operating)		
Conditions	Humidity	10~90 % RH (Storage)		
		; Except for paper		
LIFE *	Printer Head *)	250 Km		
	Auto Cutter	3,000,000 Cut		
MCBF * Printer Mechanism *)		70,000,000 lines		

- *) The specifications were determined based on operation at normal temperature using designated paper on default settings. They are subject to change depending on temperature or printing level.
- *) The specifications were tested according to standard reliability. If you want to test the product to determine its life cycle, please contact us for more details and comply with the standard reliability for testing.

** The switch is the disconnecting device. Turn off switch from any hazard.

5. Appendix

5-1 Cleaning Printer

Paper dust inside the printer may lower the print quality. In this case clean the printer as follows:

5-1-1 Open the printer cover and remove any paper.

5-1-2 Clean the print head with a cotton swab moistened with alcohol solvent.

5-1-3 Clean the paper sensor and paper roller with a cotton swab and a dry cloth.

5-1-4 Insert a paper roll and close the printer cover.

The remaining amount of paper detected by paper near-end sensor varies with the diameter of the paper core. To set the paper near-end sensor, contact your dealer.